


3. Hanging the TV onto the Wall Plate

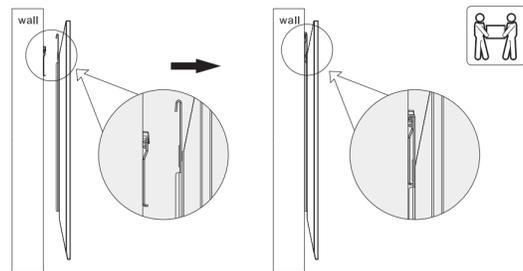


Do not release the TV until the adapter bracket have securely hooked onto the wall plate.

- Maintenance**
- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
 - Please contact your distributor if you have any questions.

Sinox Europe A/S
Troensevej 11, DK-9220 Aalborg
www.sinox-europe.com
74



SINOX[®] INSTALLATION MANUAL Ultra-slim Fixed Wall Mount

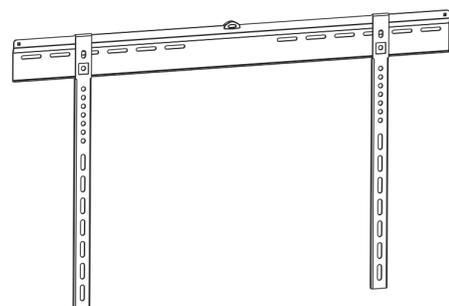

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

SOB0450	100x100 200x100 200x200 400x200	42" MAX	40kg (88lbs) RATED
SOB0460	100x100/200x100 200x200/400x200 300x300/400x400	55" MAX	50kg (110lbs) RATED
SOB0870	200x200/400x200 300x300/400x400 600x400/800x400	86" MAX	60kg (132lbs) RATED


NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING

- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items. This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

14

2-2 For Bump-out or Recessed Back Screens

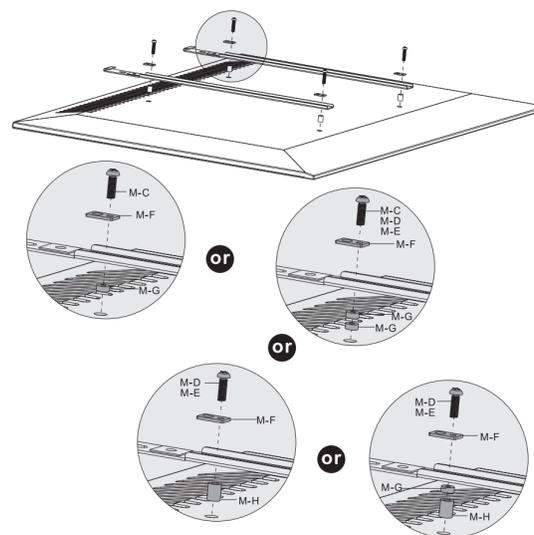


Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
• Position the adapter brackets as close as possible to the center of the TV.


⚠ Tighten all screws but do not over tighten.

19

2. Installing the Adapter Brackets

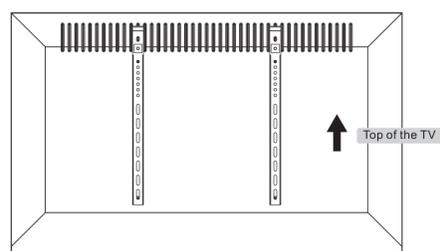

2-1 For Flat Back Screens

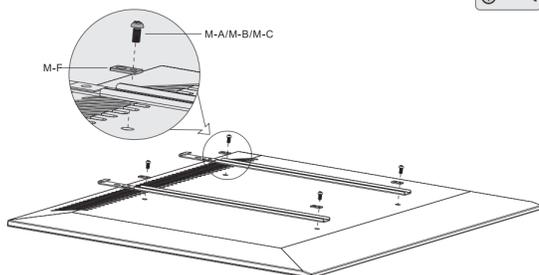


- Position the adapter brackets as close as possible to the middle of the screen.
- Screw the adapter brackets onto the TV.

⚠ Tighten all screws but do not over tighten.

5

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

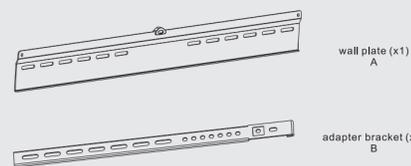

Package M





Package W



2

1a. For Wood Stud Wall Mounting

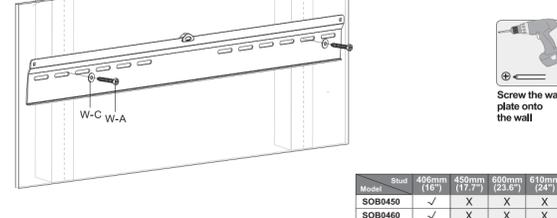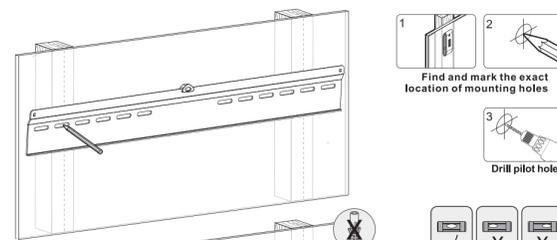



Model	Stud	40mm (1.6")	45mm (1.77")	60mm (2.36")	65mm (2.56")
SOB0450		✓	X	X	X
SOB0460		✓	X	X	X
SOB0870		✓	✓	✓	✓

⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

3

1b. For Solid Brick and Concrete Mounting

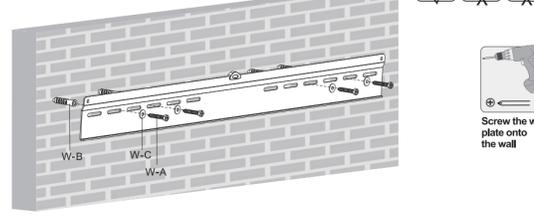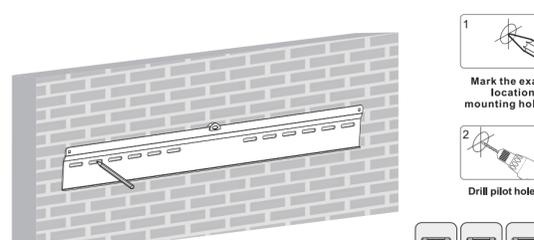

⚠ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

4