




Sinox Europe A/S
Troensevej 11, DK-9220 Aalborg
www.sinox-europe.com

SINOX INSTALLATION MANUAL
Full Motion LED, LCD TV Wall Mount

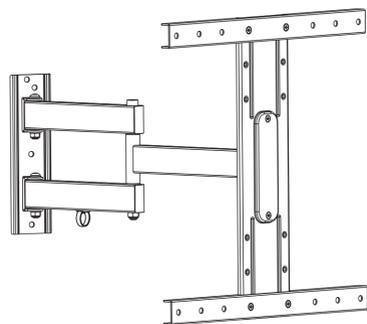

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

SOB0156 200x200/400x200 300x300/400x400 **55"** max. **35kg** (77 lbs) max.

SINOX


NOTE: Read the entire instruction manual before you start installation and assembly.

WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items. This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

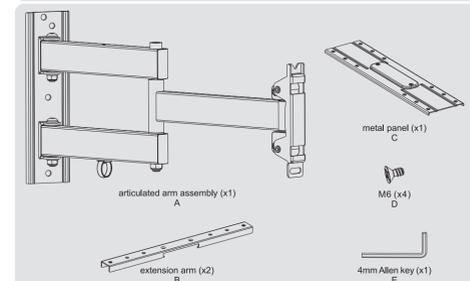

Package M

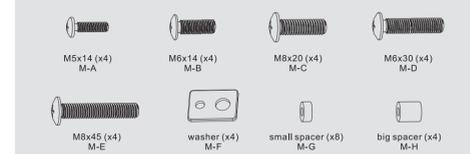


Package W



14

19

1a. For Wood Stud Wall Mounting

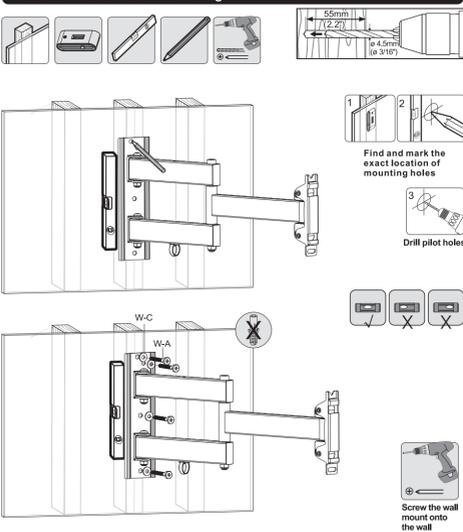


WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

34

1b. For Solid Brick and Concrete Mounting

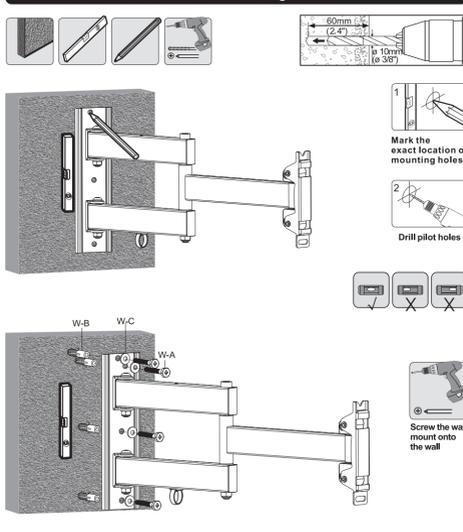


WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


35

2. Installing the Extension Arms to the Panel

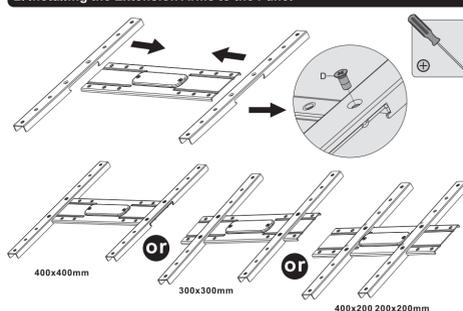


Check the distance of mounting holes at back of TV. If the distance is 200x200mm 400x200mm 300x300mm 400x400mm, install the extension arms to the plate using screws.

3. Installing the Adapter Brackets

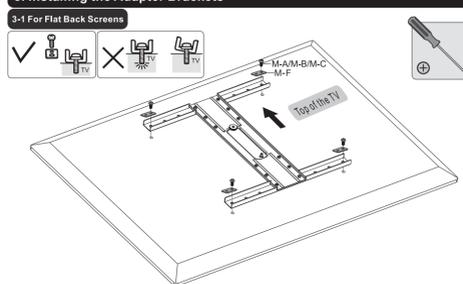

54


3-2 For Recessed Back Screens or to Access AV Inputs

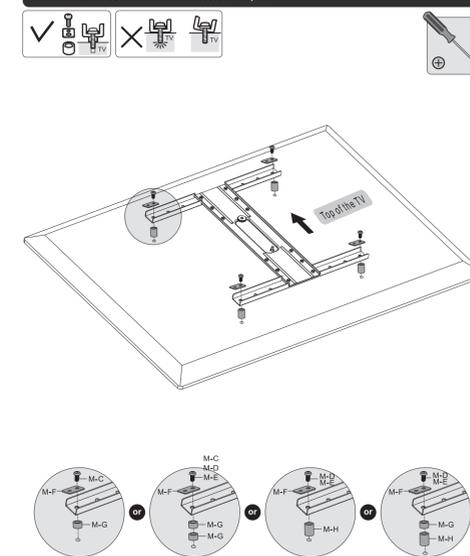

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
• Position the adapter brackets as close as possible to the center of the TV.
• Screw the adapter brackets onto the TV.
WARNING Tighten all screws but do not over tighten.


55

4. Hooking the TV onto the Wall Mount

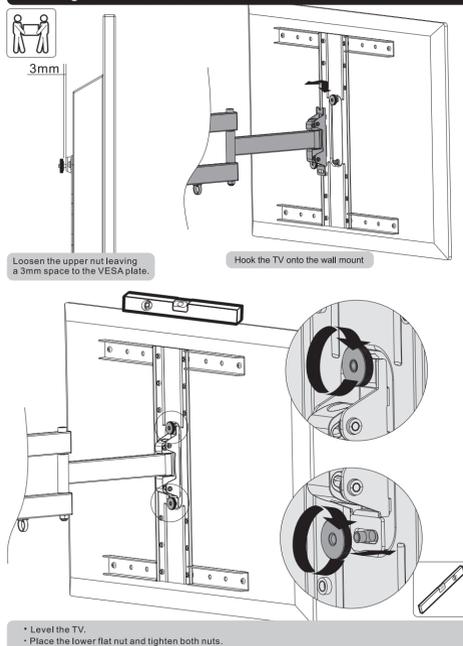


74

5. Cable Management

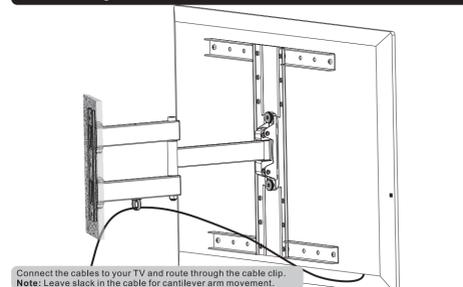

6. Adjustment

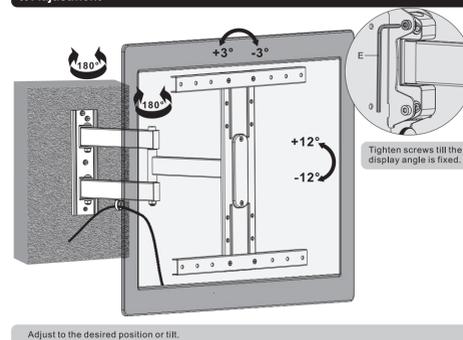

78

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.

94

10