




SOB0110 INSTALLATION MANUAL

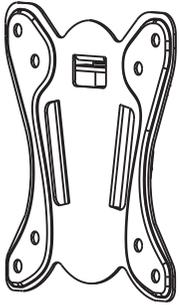

Package

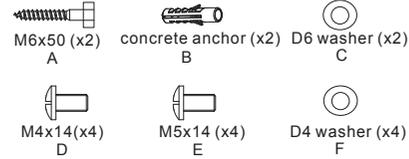


STEP2 Mounting VESA panel to the TV

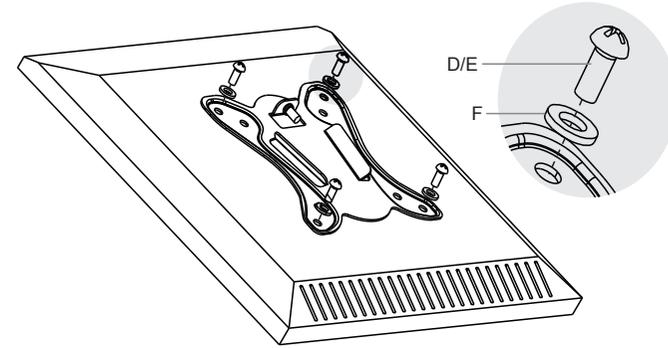


STEP1A Solid brick and concrete mounting

IMPORTANT: Holes' depth in the wall must be 60mm(2.4") minimum

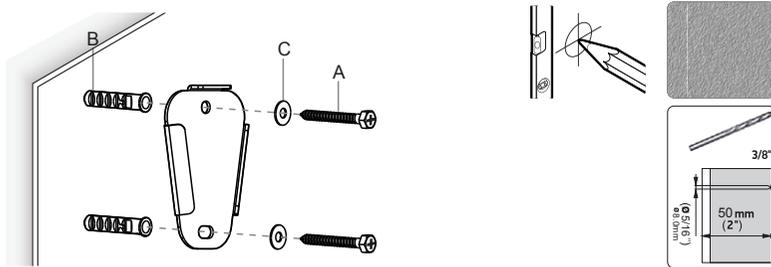

STEP1B Stud wall mounting

IMPORTANT: Holes' depth in the stud wall must be 55mm(2.2") minimum

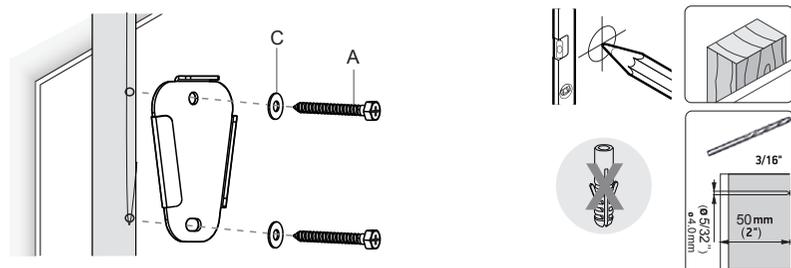

STEP3 Hang TV on the wall plate

Tighten the screw by using a proper screwdriver to secure the bracket

